

170*693mm

第一张正面

HUAYU®

English

RM-L1130+12**Instruction for UNIVERSAL
LCD/LED TV REMOTE
CONTROLLER**

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Introduction:
RM-L1130+12 is the newest universal LCD/LED TV remote controller, Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

**Battery Installation**

In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rationed), which is shown in the figure.

**Battery Description**

- The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
- Please do not put old and new batteries or different types of batteries together.
- In case of battery leakage, the batteries should be removed and the battery cabinet must be cleaned before putting into new batteries.
- You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:

This remote controller has the following methods for setup, you can choose any of them.

***********A.Inputting code:**

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.

3. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off., setting to be finished. If the code is more than one set, please use first one at first.

4. Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

B.Manually searching for the code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote

controller will be in the state of Manually searching for the code.

3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4. Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

C.Automatically searching code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2. Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

3. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

D.Point to Point Brand Searching:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTHY = "0".

2. Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.

3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4. Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

5. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

***********Русский****А.Поиск нужной марки телевизора с помощью ввода кода вручную**

1. Включите телевизор и в перечне кодов найдите тот, который соответствует марке Вашего телевизора.

2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.

3. Введите три первых цифры кода, соответствующего модели телевизора, после ввода кода индикатор перестанет гореть, установка завершена.

Б. Способ ручного поиска кода:

1. Включите телевизор и направьте на него пульт.

2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка. Тогда релиз, на этот раз в состоянии ручного поиска.

3. Проверьте работу кнопок на ПДУ (Установите кнопку, клавиши регулировки громкости, кроме). При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

5. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

С.Модели с функцией автоматического поиска

1. Включите телевизор и направьте на него пульт.

2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Индикаторная лампочка начнет мигать. Пульт активизировал функцию автоматического поиска. Внимательно смотрите на экран телевизора, не отпуская кнопку "SET". Введите три первых цифры кода, соответствующего модели телевизора.

3. Проверьте работу кнопок на ПДУ (Установите кнопку, клавиши регулировки громкости, кроме). При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

Д.

1. Найдите код, соответствующий модели вашего телевизора. Например, для SKYWORTHY - это "0". Включите телевизор и направьте на него пульт.

2. Удерживайте нажатой кнопку кода, пока не загорится индикаторная лампочка (около 3 секунд). Не отпускайте кнопку, и индикаторная лампочка начнет мигать. Активизировался режим поиска кода. Когда на экране появится символ громкости, отпустите кнопку кода. Индикаторная лампочка погаснет. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

3. Проверьте работу кнопок на ПДУ (Установите кнопку, клавиши регулировки громкости, кроме). При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

5. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

***********Espanol****A.Ingresa el código**

1. Encender el televisor, apunte el control remoto hacia televisor, luego encontrar el correspondiente código de tres dígitos de la marca correspondiente en la tabla de códigos.

2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelte el botón por lo que se convierte en el estado de entrada de código.

3. Ingresar primer conjunto de código de tres dígitos. cada vez que un dígito es la entrada, la luz de indicación parpadeara una vez, después que todos los 3 dígitos ha ingresado, la luz de indicador estaria apagado, si el código es más de un conjunto, por favor, utilice la primera.

B.La búsqueda manual del código

1. Encender el televisor, apunte el control remoto hacia televisor.

2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelte el botón por lo que se convierte en el estado de entrada de código.

3. presione el botón de volumen + una vez y luego suéltelo, ver si el símbolo de volumen aparece en la pantalla de TV, si no se produce tal símbolo, repita el procedimiento.

4. Después de que el símbolo de volumen aparece, pruebe otro botón de

5. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

***********Warm Tips**

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
- when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

4. Después de que el símbolo de volumen aparece, pruebe otro botón de

5. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

***********Warm Tips**

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
- when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

4. Después de que el símbolo de volumen aparece, pruebe otro botón de

5. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

***********Warm Tips**

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
- when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

4. Después de que el símbolo de volumen aparece, pruebe otro botón de

5. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

***********Warm Tips**

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
- when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

4. Después de que el símbolo de volumen aparece, pruebe otro botón de

5. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

***********Warm Tips**

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
- when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

4. Después de que el símbolo de volumen aparece, pruebe otro botón de

5. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

***********Warm Tips**

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
- when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

4. Después de que el símbolo de volumen aparece, pruebe otro botón de

5. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

***********Warm Tips**

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
- when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

4. Después de que el símbolo de volumen aparece, pruebe otro botón de

5. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

***********Warm Tips**

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
- when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries After-sales Service

- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been dis

HUAYU®

RM-L1130+12

398



KK-Y331J

399



KK-Y331J

400



HD LED100

401



GBTY ONGOV59

402



XY-B02E

403



LCD TV PHONAR

405



PHONAR LED TV

406



DAWA MV

407



IDEA

408



IDEA

409



IDEA

410



IDEA

411



IDEA

412



IDEA

413



IDEA

414



IDEA

415



AOC-02

416



DEX LT-2220

417



ORION LED2643

418



Akai SLP-006P

419



Fusion FLT V 22H11

420



Fusion FLT V 32H17

421



FUSION RC15b

422



Shivaki K77

423



Shivaki K78

424



Supra TV-DVD

426



RC-GK22G1

427



H-LCD3210

428



LED321LC

429



SKYPRIME HD

430



SUPRA RC21b-1219

431



ORION LCD

432



TC1860F1-RS

433



JH-11370

434



LED-851

435



RC-D3

436



YC-53

437



STV-22LED5

438



LED-EH4720BF

439



DNS M28AM8

440



051D RED

441



33585

442



RC33729

442



HOB842

442



34090

442



34091

443



RC31277

444



Fusion RC25b

445



RC23b

446



RC-E23

449



AKI AK61

450



AKI LCD AK66

451



AKI LCD AK68

452



AKI-OND IGO LCD

453



ONIDA LCD

454



ONIDA LCD ON87

516



051D BLACK

520



SNOWA 51163

528



BLAUPUNKT

531



J-1274

540



MERTER 33186

542



BRAVIS LED-1615

543



Marshal ME-2409

544



ONIDA LCD1

545



Akai HOF08J001

546



Polar 94 LTV6004

547



AN-LT3222 AN-LT3225 AN-LT2416

548



FUSION HY-079

549



SATURN LED40FHD500U

540



DEXP 16A3000

540



RUBIN RB-28D772C

550



DNS S19ASL1

551



RM-NST60

533



RM-SK09

576



VESTEL LCD T1396

577



VESTEL LCD

578



HAIER HTR-A10

579



EN3V39H

580



VESTEL LCD T1550

581



MICROMAX

582



RECONNECT

583



YASIN

584



HISENSE

585



SANSUI B0084621